


Hi Lox Sender support arm rework.
10/2001 and later.

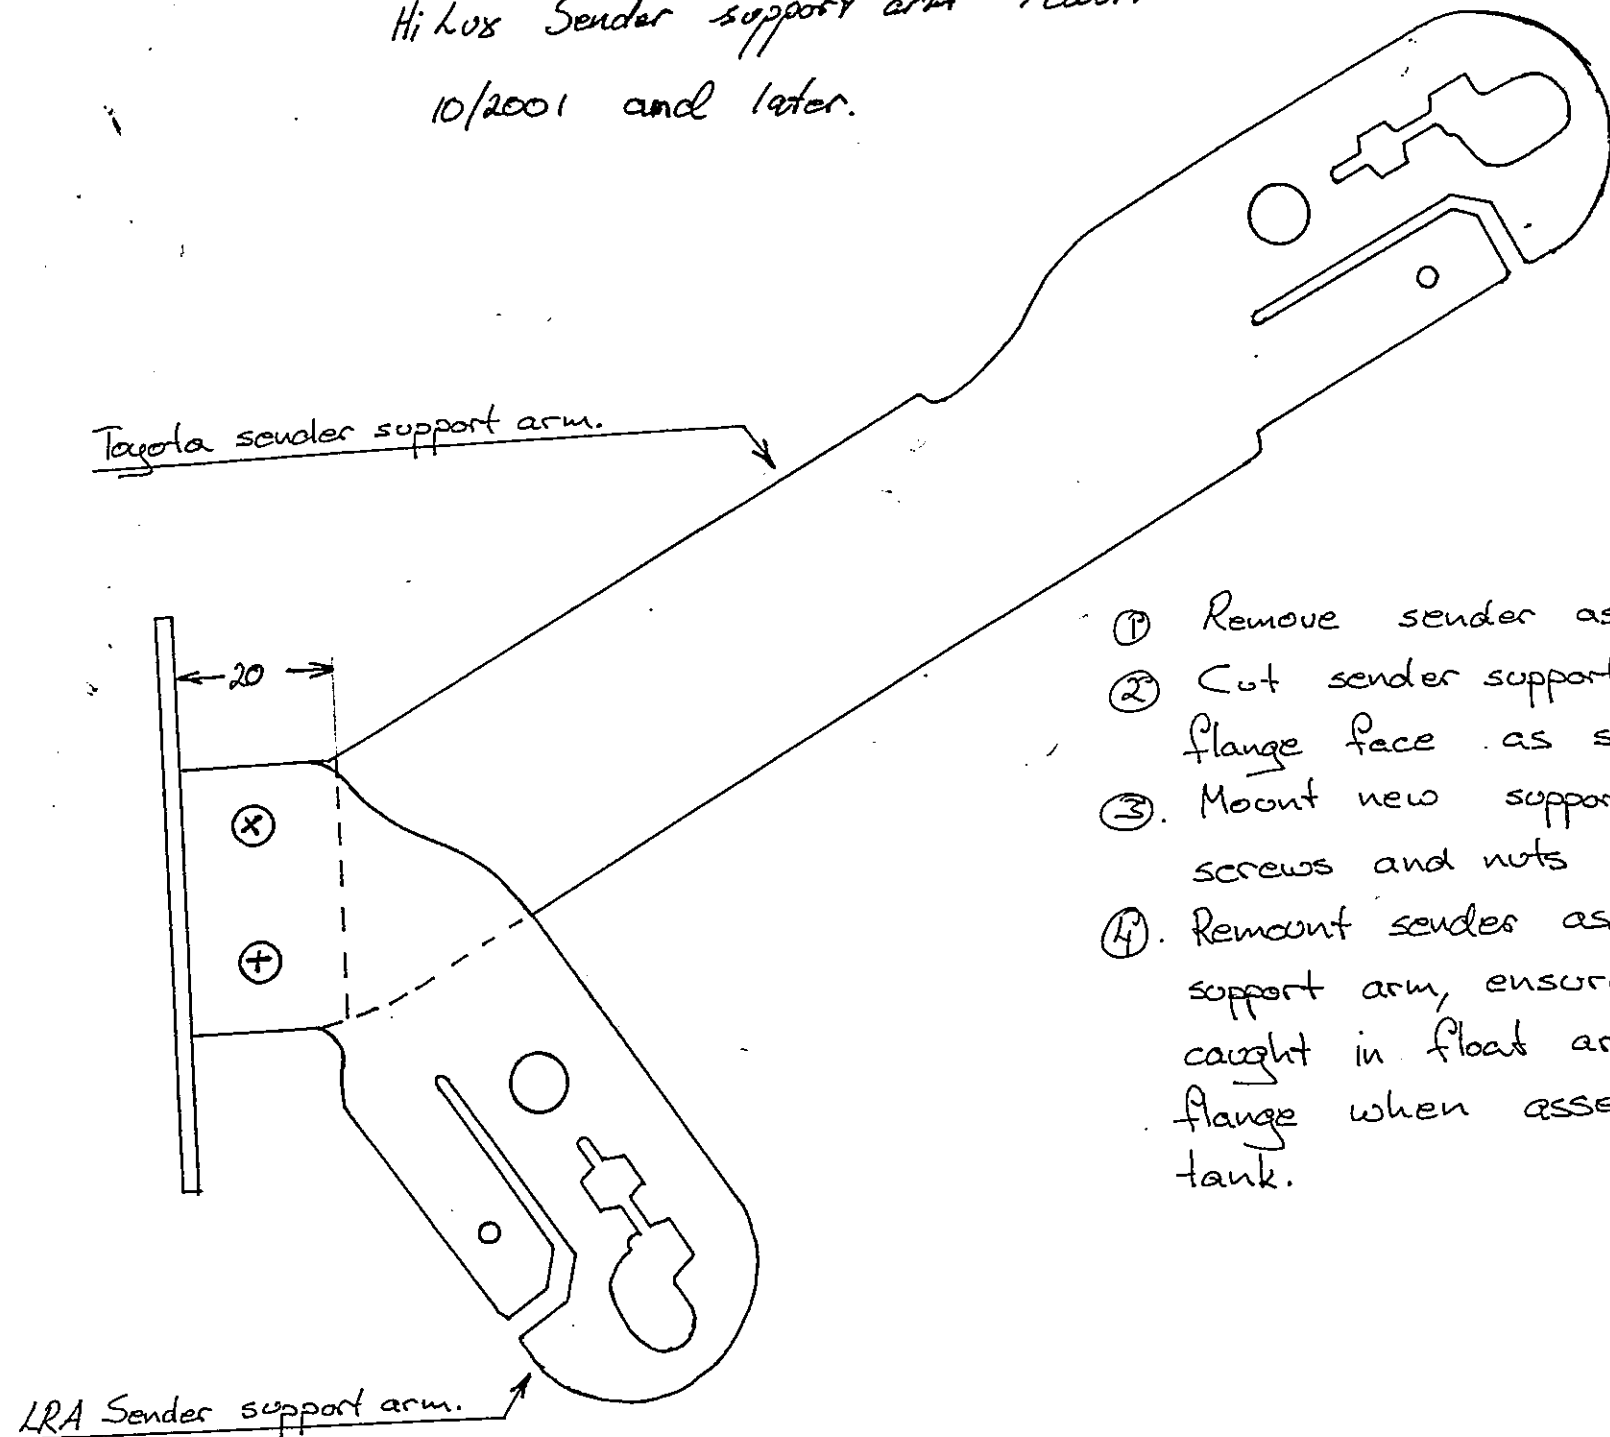

- ① Remove sender assembly from support.
- ② Cut sender support arm 20 mm from flange face as shown.
- ③ Mount new support arm using 145x10 screws and nuts provided.
- ④ Remount sender assembly to new support arm, ensure wires will not get caught in float arm or jammed under flange when assembly is fitted into tank.