

Installation Instructions for TLC100AX <u>Toyota Landcruiser 100 Series IFS</u> <u>160lt Auxiliary Fuel Tank</u>

This auxiliary tank fits up under the rear of factory single tank Live Axel Landcruiser. It works on a fuel transfer system using an electric pump to pump fuel into the original fuel tank. The original filler neck will require modification to allow the installation of a new twin filler neck.

Fuel is transferred via an electric pump that will pump fuel from the auxiliary tank into the OEM tank. A combination switch/gauge will be located into a suitable position in the dash. When the switch is in operation an ORANGE light will be ON, indicating that the transfer pump is in operation. A series of lights will also indicate fuel level.

All GREEN lights on showing FULL, one RED flashing light showing EMPTY. Once empty the pump will automatically shut off after 2 minutes.

- Install wiring and switch gauge as per drawings. Remove drivers kick panel & scuff plate and lift carpet slightly to expose 25mm grommet in floor. This is a good exit point for twin core wire to be run through and up to the rear of the vehicle. 12 volt ignition power is black/red wire found at ignition switch.
- 2. Cut OEM filler neck as per diagram & install new twin filler neck. Note fast fill hoses must be crossed over. Fast fill hose for front tank is connected to rear filler neck & vice versa, this prevents splash back or pump cutting out when filling. Mount fuel transfer pump to the rear of the body panel using new filler neck mounting bolt. Thread will be protruding towards the rear of vehicle making this possible. This mounting is also a good spot for fuel pump and gauge sender earth wires.
- 3. Install tank mounting brackets using OEM mounting holes as locating points and drill new holes as needed. Secure mounting brackets to chassis. Install 5/16 x ¼ fitting into pick-up socket and connect hose. Spare socket will need 1/4 BSP plug fitted. Lift tank into position & secure. Install fast fill fitting & connect all hoses and wires.
- 4. Fill with fuel and check for leaks.




FITTING KIT CONTENTS TLC100AX

Updated 5/20 - TL Brass: Electrical: o 1 x P3 5/16 x 1/4 Straight o 1 x LRA-PG210 Switch/Gauge Unit o 1 x P6 5/16 x 1/4 Elbow o 1 x 3mm 2 Core Cable @ 6000mm o 1 x P3 1/2 x 1/4 Straight o 1 x 4mm Single Core Blue Wire @ 300mm o 1 x 1/4 BSP Plug o 1 x 5AMP Fuse o 2 x P6 1/2 x 1/4 Elbows o 1 x Fuse Holder o 2 x Fuse Holder Terminals o 3 x Red Insulated Terminals o 1 x Red Eye Terminal o 1 x 8mm Blue Eye Terminal o 2 x Red Male Terminals o 5 x 3mm Shrink Tube @ 25mm Bolts / Nuts: Misc Parts: o 1 x TF100TLCEXP Twin Filler Neck o 3 x M8 x 25 Bolt o 12 x M8 Flat Washers o 1 x Front Tank Mounting Bracket o 2 x M8 Spring Washers o 1 x Rear Tank Mounting Bar o 2 x M10 Flat Washers o 10 x M8 x 25mm Bolts with 200mm o 4 x M12 Flat Washers Straps o 2 x M10 Nvloc Nuts o 1 x M8 Nut o 10 x M8 Nyloc Nuts o 2 x M12 x 30 Bolts o 2 x M12 Nyloc Nuts Hose Clamps: Hose: o 6 x 1/4" Hose Clamps o 1 x 8mm Hose @ 1500mm o 4 x 1/2" Hose Clamps o 1 x 12mm Hose @ 400mm o 4 x 1 1/4" Hose Clamps o 1 x 12mm Hose @ 550mm o 1 x 35mm Fuel Hose @ 110mm o 1 x 32mm Fuel Hose @ 150mm Pumps & Filters: Cable Ties: o 12 x 7" Cable Ties o 1 x Fuel Pump & Filter o 1 x Fuel Pump Mounting Plate

Sender:	6 Pages of Fitting Instructions Consisting of:
o 1 x Sender 0 − 90 OHM C/W	 1 x Page Fitting Instructions
500mm Earth, Installed With:	2 x Page Fitting Kit Contents
- 5 x M5 x 10 Pan Heads	o 2 x Pages Installation Drawings
- 5 x M5 Spring Washers	o 1 x WDSGPG210 Diagram

Kit Packed By	Checked By

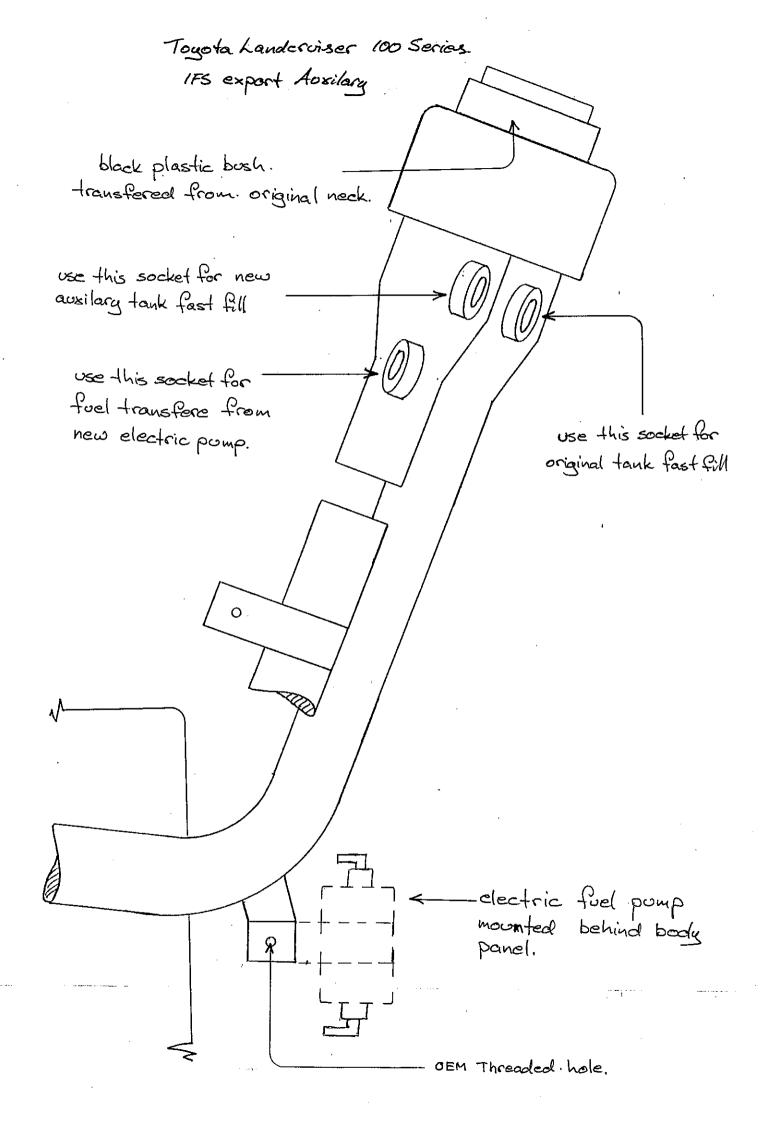

Togota Landervisor 100 Sories 1 FS export Auxiliary

